HEATMASTER

Flue details

Fluing your Heatmaster fireplace.

The Heatmaster double skin flue kit, into timber and plaster must have clearance of 25mm from any combustible material. Be sure the inner stainless steel flue crimped end faces down while the outer galvanized flue crimped end faces up. The first length of galvanized flue must have ventilation holes at the bottom; these cool the flue down by allowing air to travel in between the two skins.

Be sure to pop rivet (or use self-tapers) each stainless and galvanized flue length together along with the cowl.

The flue must protrude above the roofline by no less then 600mm with nothing obstructing within 3600mm. (See diagram 3B)

600 min above

ADD Cowl (see manufacturer

Silicon flashing to ensure no water

can enter roof line


for other cowl options)


roof 3.6 m away

*Close proximity to large trees, buildings or landmass, different climates or Fig 3A - Flue installation atmospheric conditions of certain areas may contribute to a fireplace not drawing to it's optimum, in these cases more flue height may be required.

Ventilation holes in outer flue or Fig 3B - Flue Roof Clearance Situation "A" less than 3.6 Metres Situation "B" greater than 3.6 Flashing 600 min ROOF above roo Ceiling void 25mm from combustible combustible material 2nd skin Framing 50 mm on edge sit on top of box Ceilina void 100 mm clearance Spacers on inside of gal flue to ensure 25mm Cover clearance with desired fascia clearance from outer flue 25 mm ventilated Crimp end faces up air gap with non spacers Min Flue Front of unit height 3.6 m cement sheet from top of unit steel sheet Ventilation Holes Stainless Steel Flue Crimp end faces down

Fig 3C - Off sets and Clearances

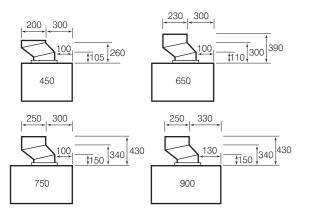

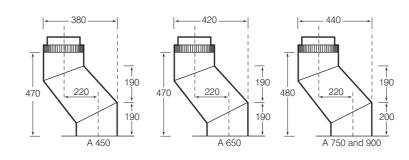

HEATMASTER

atmosphere warmth style

THE "A" SERIES

Standard Insulated **Heatmaster Fireplace** Installation Guide

Heatmaster **National Office**


2/9 Nicole Close Bayswater Victoria 3153

Phone: 03 9761 7130 03 9761 7134

www.heatmaster.com.au





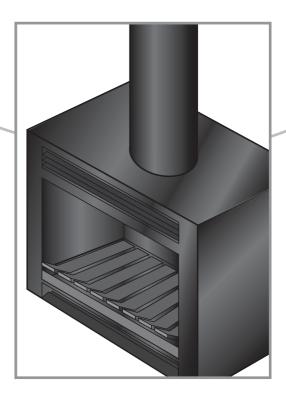

Installation of fireboxes



Heatmaster fully insulated firebox "A Series".

Suitable for timber or brick installation.

The Heatmaster open fireplace system comes as a fully self-contained fireplace kit. The firebox, log grate, ashtray, flues and cowl are the basic components (Fig 1A). When installing your Heatmaster fireplace please be sure to read the following carefully and to comply with all clearances. Full specifications are available upon request.

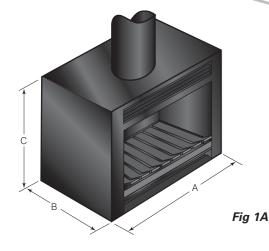


Fig 1A - Flue System sizes and Specifications

Model No	A450	A650	A750	A900	
Inner Flue	150mm	180mm	200mm	200mm	
Outer Flue	200mm	230mm	250mm	250mm	

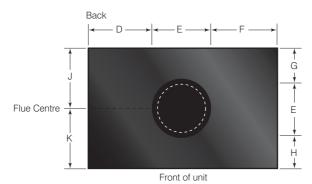


Fig 1A - Dimensions

Model No	Α	В	С	D	E	F	G	Н	J	К
A450	595mm	395mm	670mm	195mm	205mm	195mm	90mm	100mm	195mm	200mm
A650	840mm	470mm	680mm	315mm	205mm	315mm	155mm	110mm	255mm	215mm
A750	910mm	495mm	680mm	325mm	260mm	325mm	140mm	90mm	270mm	225mm
A900	1060mm	565mm	740mm	400mm	260mm	400mm	180mm	125mm	315mm	250mm

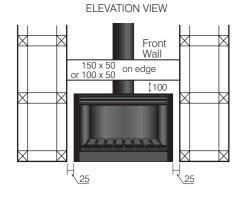


Fig 1B - Min. Framing Dimensions on Non-combustible floor

Model No	A450 A650		A750	A900	
Height from non combustible floor	770mm	780mm	780mm	840mm	
Width	645mm	890mm	960mm	1110mm	
Depth "C"	430mm	505mm	530mm	600mm	

Fig 1B

PLAN VIEW

25

Timber on edge 25mm clearances

on edge H 25

Fig 1B - Min. Framing Dimensions using standard hearth (fig 2A) on combustible floor

Model No	A450	A650	A750	A900	
Height from combustible floor	808mm	818mm	818mm	878mm	
Width	645mm	890mm	960mm	1110mm	
Depth "C"	430mm	505mm	530mm	600mm	



Hearth details

Hearth details for combustible flooring.

The hearth required under the Heatmaster firebox consists of two sheets of 6mm thick fibre-cement with a 1mm thick sheet of steel between them. It must be spaced off the floor with non-combustible spaces (square tubing) to give a 25mm ventilated air gap (Fig 2A). It should extend 350mm in front, 25mm behind and 200mm either side of the


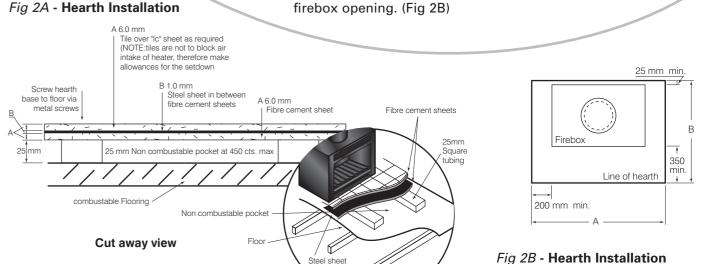


Fig 2C - Installing your Heatmaster step by step

Timber Installation. Fully insulated Models
A step by step guide to installing "A series" Heatmaster.

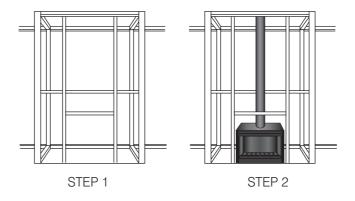

Step one. After selection

STEP 3

timber paneling, ensuring

approved clearances are

Enclose framing with plasterboard/gyprock or

Step three.

maintained.

After selecting your Heatmaster unit and installing your hearth (see above diagram fig 2A) erect frame work with the appropriate clearance (see timber framing specification fig 1B).

Step two.

Install selected insulated "A series" Heatmaster unit along with flues (see Flue detail diagram fig 3A).

Fig 2D - Finishing your Heatmaster installation

Model No

A450

A650

A750

A900

width 'A'

770mm

845mm

870mm


940mm

995mm

1240mm

1310mm

1460mm

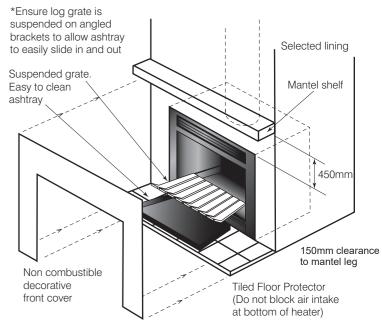

Step four.

Select one of our many finishing options. A wide range of stone, marble, cast iron or steel fascias and mantelpieces are available.

Installation of fireboxes