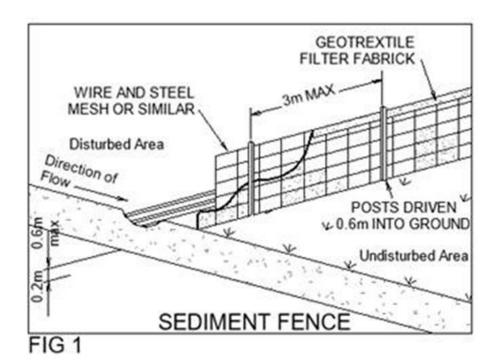
Sediment Control Plan

Demolition of the existing driveway and Subdivision of the existing lot into 3 allotments – 158 Elanora Road, Elanora Heights

- 1. Install Sediment Barrier on downslope sides of property
- 2. regularly maintain Sediment Barriers
- 3. Clean and Clear footpath and roadway as required
- 4. Limit Disturbance when Excavating
- 5. Wash Equipment in Designed area
- 6. Store all hard waste & litter in a designed area
- 7. Restrict vehicle movements and use the driveway only when possible.
- 8. Preserve as much grassed area as possible.

Typical details



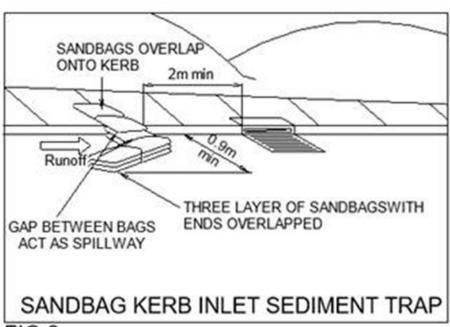


FIG 2